


OPERATING INSTRUCTIONS



SCP062H / SCP0621 / SCP062HSV *SnapMate*® Valved In-Line Connector

DESCRIPTION: Valved In Line *SnapMate*® with pin grip.

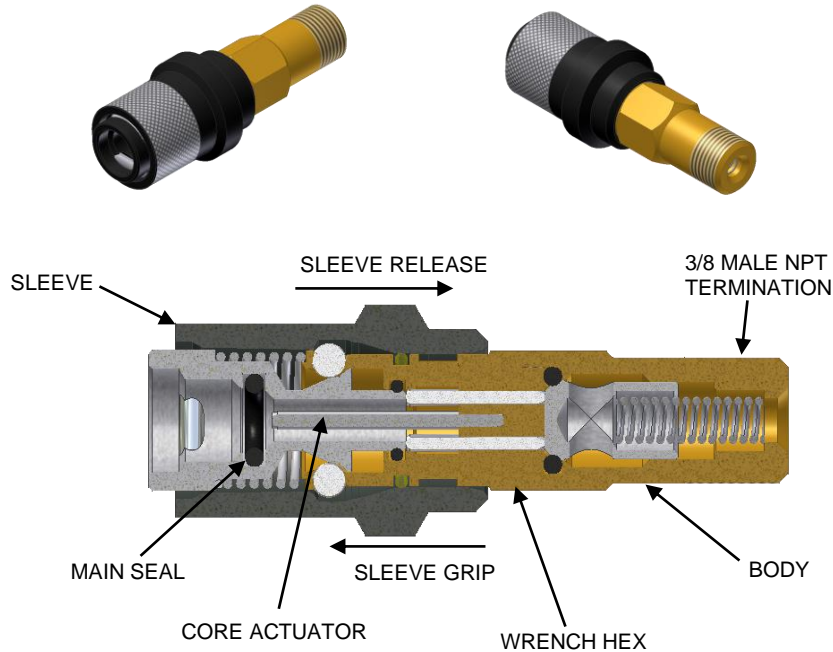

Please thoroughly read the instructions prior to operating the connector. The SnapMate is designed to provide a safe, reliable leak-tight seal and connection when properly maintained and operated.

- The connector is designed to mate with a specific application. Verify the application prior to the introduction of pressure or processing. Use only in a safe environment. Safety chains and guards are recommended for all applications.
- Connectors are NOT designed for permanent connections and are for temporary connections only.

DO NOT EXCEED pressure rating as marked on connector or corresponding literature.


OPERATION:

1. Open the connector by pulling the knurled sleeve back towards the termination end (threaded end) of the connector.

2. Fit connector over the *CoreMax*® and slide sleeve forward (towards the *CoreMax*®) until it stops.

3. Perform evacuation / filling operations.

4. Slide sleeve back away from the *CoreMax*® to disengage and remove.

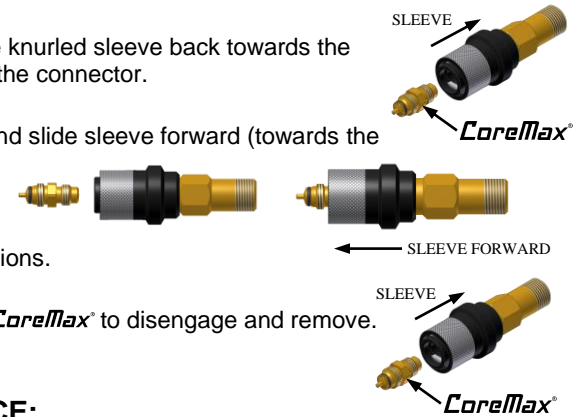

CONNECTOR MAINTENANCE:

- A daily, weekly and periodic inspection of the connector by competent person is recommended.
 - User must establish a regular interval for maintenance as determined by the user media and operational environment.
 - Inspection should include damage to the body missing or loose components, leak tightness, ease of operation, sufficient lubrication, wear, dirt accumulation and damage.
- **FasTest** should refurbish connector after 30,000 fill cycles.
- Use only original **FasTest** spare parts that are designed for the application and are subject to strict quality control. See warranty.
- The main seal must be replaced at least every 1,000 cycles. **FasTest** recommends a daily visual inspection of the main seal located in the front of the piston. Inspect for tears or cracks in the seal surface. Replace the main seal if tears or cracks are visible.
- Lubricate on regular intervals under normal operating conditions. Lubrication should be compatible with user application.

FasTest, Inc. Product Warranty

FasTest, Inc. warrants its products against defects of workmanship and/or material for **12 months** from the date of the sale by FasTest, Inc. This warranty is void if the product is misused, tampered with or used in a manner that is not in accordance with FasTest, Inc. recommendations and/or instructions. FasTest, Inc. is not liable for consequential or other damages including, but not limited to, loss, damage, personal injury, or any other expense directly or indirectly arising from the use of or inability to use its products either separately or in combination with other products. ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, WHETHER ORAL OR WRITTEN, INCLUDING BUT NOT LIMITED TO WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED.

Remedy under this warranty is limited to replacement of the product or an account credit in the amount of the original selling price, at the option on FasTest, Inc. All allegedly defective products must be returned prepaid transportation to FasTest, Inc. along with information describing the products performance, unless disposition in the field is authorized in writing by FasTest, Inc.

SnapMate®
PAT# 6,039,303

www.fastestinc.com
Roseville, MN
Toll Free at 1-800-444-2373
Fax 651-645-7390
WP040 1/5/2016