

# CoreMax<sup>®</sup> / MANUAL TORQUE WRENCH

» Manual torque wrench to properly install/tighten CoreMax<sup>®</sup> Valve Core into Seat

## CONNECTS TO:

CoreMax




Use wrench to hold Seat in place to prevent applying torque to Seat braze while torquing Valve Core

## SPECIFICATIONS

Materials of Construction

Stainless Steel

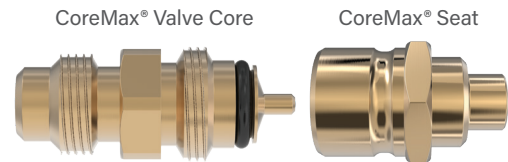

**i** Pre-lube Core seal with compatible refrigeration oil prior to torquing.

- 1** Pre-set calibration torque setting at 8 lb-ft (10.9 N-m)
- 2** Wrench will notify when proper torque has been applied by clicking
- 3** Lightweight and durable for CoreMax<sup>®</sup> Core installation

## ACCESSORIES VISIT [FASTESTINC.COM](http://FASTESTINC.COM)




# CoreMax<sup>®</sup> / MANUAL TORQUE WRENCH

» Manual torque wrench to properly install/tighten CoreMax<sup>®</sup> Valve Core into Seat

## DIMENSIONS

inch (mm)

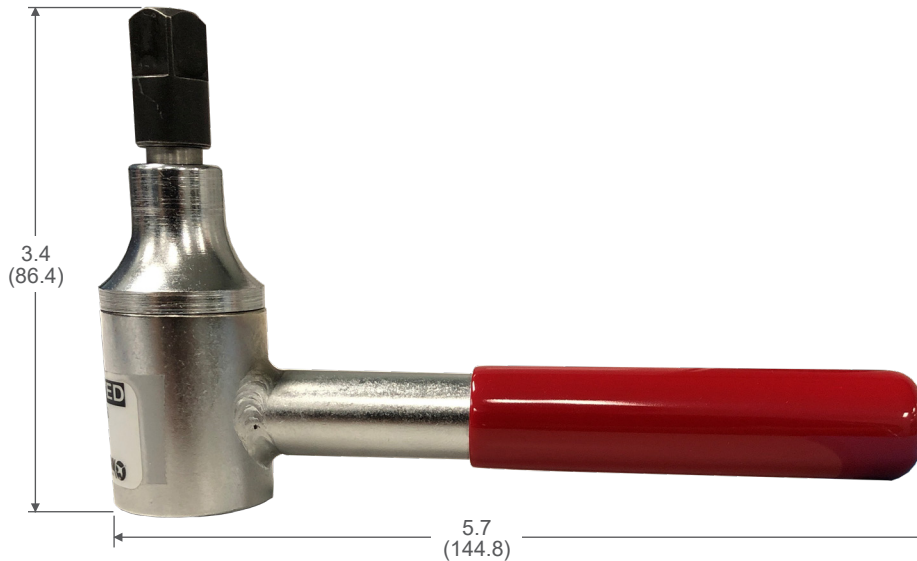

## ORDERING INFORMATION

Part ID's

SCFTM01 (Manual Torque Wrench)  
5544A63 (Replacement Socket)

## HOW TO ORDER

Request A Quote

Visit: [www.fastestinc.com](http://www.fastestinc.com)

Contact A FasTest Representative

Email: [fastsales@fastestinc.com](mailto:fastsales@fastestinc.com)

## PRODUCT SAFETY:

All FasTest products have been designed with safety in mind, however, it is the responsibility of the product user to design each process in such a way to avoid mishaps that can cause physical hazard or property loss. Secondary restraints such as safety chains, shields, cages or fixtures are all good choices depending on the application. FasTest can recommend or assist you in clarifying potential hazards of your application. Note: not suitable for water-dunk testing applications.