


# OPERATING INSTRUCTIONS

6. Remove the Core Insertion Tool from the core Loading Tool. The core is now properly installed.

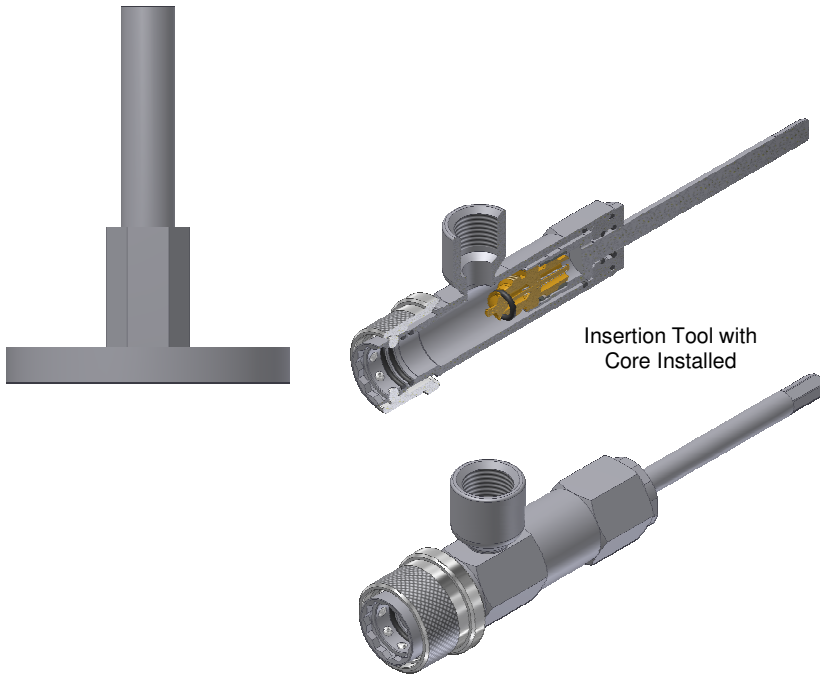


## **FasTest, Inc. Product Warranty**

FasTest, Inc. warrants its products against defects of workmanship and/or material for 12 months from the date of the sale by FasTest, Inc. This warranty is void if the product is misused, tampered with or used in a manner that is not in accordance with FasTest, Inc. recommendations and/or instructions. FasTest, Inc. is not liable for consequential or other damages including, but not limited to, loss, damage, personal injury, or any other expense directly or indirectly arising from the use of or inability to use its products either separately or in combination with other products. ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, WHETHER ORAL OR WRITTEN, INCLUDING BUT NOT LIMITED TO WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED.

Remedy under this warranty is limited to replacement of the product or an account credit in the amount of the original selling price, at the option of FasTest, Inc. All allegedly defective products must be returned prepaid transportation to FasTest, Inc. along with information describing the products performance, unless disposition in the field is authorized in writing by FasTest, Inc.

## **SCFTL10 Core Loading Tool**

**Description:** The Core Loading Tool works in conjunction with the Core Insertion Tool (SCFT10). The Load Tool insures proper insertion of the *CoreMax* Core into the Core Insertion Tool.

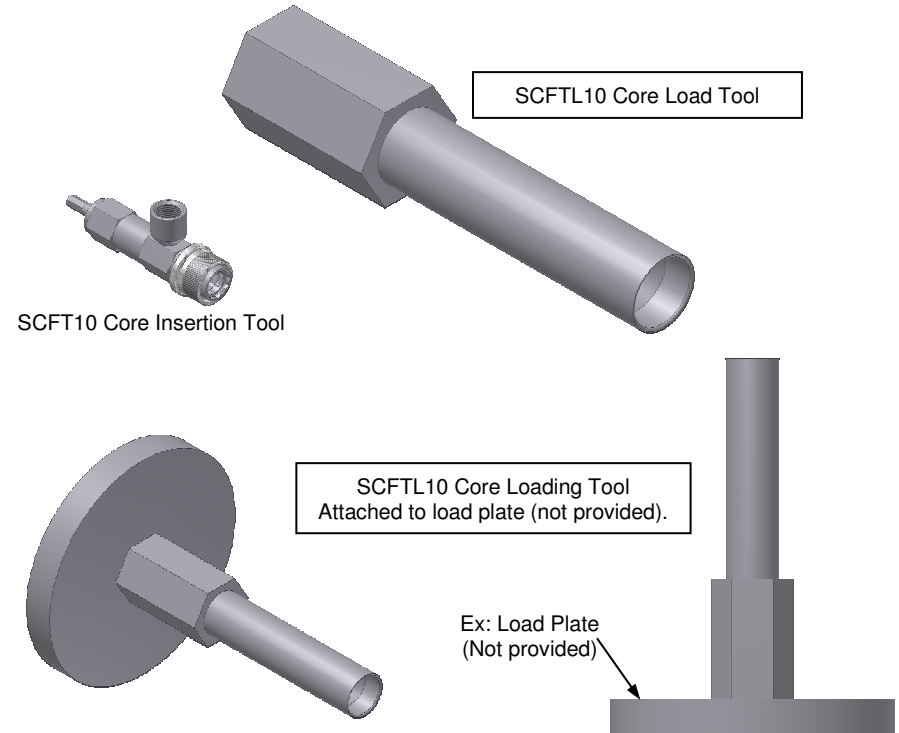


Please thoroughly read the instructions prior to using the SCFT10L Core Loading Tool. If you do not understand instructions, or if components are missing, call *FasTest* before using this load tool.

# OPERATING INSTRUCTIONS


**Note: See WP048 for Operating Instructions on Core Insertion Tool (SCFT10).**

## **Operation of the SCFT10L Core Loading Tool:**


1. The Core Load Tool is provided with 3/8-16 UNC threads to be mounted onto a load plate (not provided). The tool can be mounted horizontally or vertically, depending on the user's preference.
2. Insert the Core as shown with the o-ring end of Core inserted into the Core Loading Tool. The Core will be lightly retained in the tool.

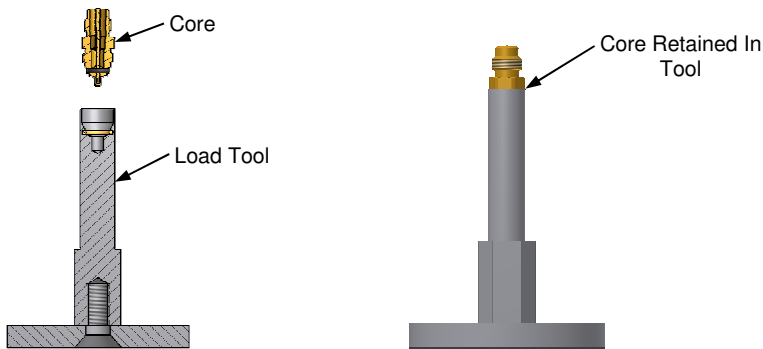

3. Core Insertion Tool (SCFT10) preparation. Pull the sleeve back and hold, then push the shaft in all the way. The socket end of shaft will almost be flush with the end of the tool.

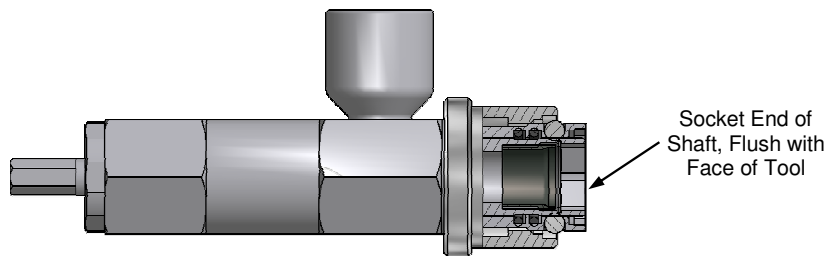

4. Place the Insertion Tool socket onto the Core at the top of the Core Loading Tool.

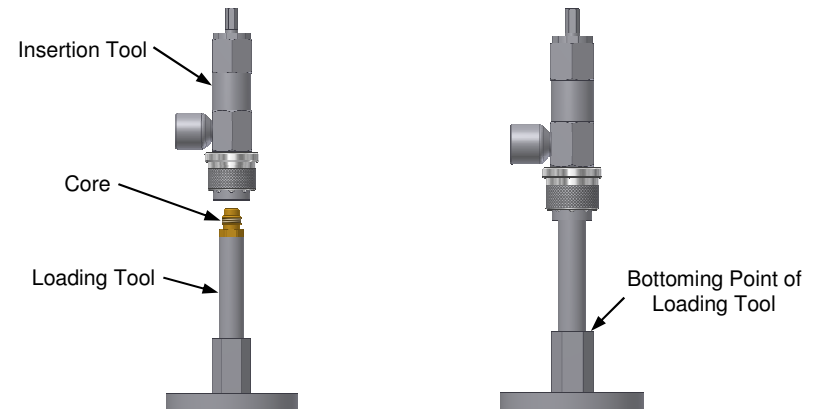

5. Push the Insertion Tool down until it contacts the bottom of the Loading Tool. You will feel the Insertion Tool engage at the bottom of the Loading Tool.

